

## IMPORTANT SAFETY INSTRUCTIONS

When using any electrically powered product, basic safety precautions should always be followed.

### PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.

1. Check the household voltage to ensure it matches the units rated specification before operating.
2. Close supervision is necessary when the unit is used by or near children or pets, or left unattended.
3. Do not allow children to play with any product packaging, such as plastic bags.
4. Do not operate the unit with a damaged cord or plug, after the product malfunctions, or has been dropped or damaged in any way. Return the complete product to an authorised service facility for examination and repair.
5. This product is intended for domestic use only and not for commercial, industrial or outside use.
6. Always turn the unit off and unplug before moving location.
7. To disconnect from the power supply, grip the plug and pull from the power socket. Never pull by the cord.
8. Do not operate the unit in areas where petrol, paint, or other flammable liquids are used or stored.
9. Do not use the unit in artificially hot or humid conditions or allow it to be used in any hazardous environment.
10. Do not place the unit near an open flame, cooking or heating appliance, or hot surface.
11. This unit is not intended for use in wet or damp locations. Never locate the unit in an area where it may fall into a bath or other water container. Always use on a dry level surface.
12. Do not let the power cord hang over the edge of a table or counter. Arrange the power cord away from an area where it may be tripped over.
13. Never place the power cord under a carpet or rug.
14. Do not place objects on the product or allow objects to obstruct the inlet or outlet openings. Do not operate in close proximity to walls or curtains, etc.
15. The use of attachments or accessories not recommended or sold by the product distributor is not recommended as they may cause injury to persons or property and void the warranty.
16. Do not attempt to repair the unit other than to replace or clean the filters. To repair the unit take it to a qualified service engineer.
17. Set on high speed to clean room air rapidly and then turn to low speed half an hour later. When used at night, set the speed at low to keep the air fresh and.
18. If the supply cord is damaged it must be replaced by the Manufacturer or an authorised service centre in order to avoid a hazard.

## BS PLUG WIRING

**Wiring Instruction: Should it be necessary to change the plug please note the wires in the mains lead are coloured in accordance with the following code:**

### BLUE – NEUTRAL BROWN – LIVE


As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

1. The **BLUE** wire is the **NEUTRAL** and must be connected to the terminal marked with the letter **N** or coloured **BLACK**.
2. The **BROWN** wire is the **LIVE** and must be connected to the terminal marked with the letter **L** or coloured **RED**.
3. **NEITHER WIRE** should be connected to the terminal which is marked with the letter **E**,  or coloured **GREEN** or **GREEN /YELLOW**.

Always ensure that the cord grip is positioned and fastened correctly.

If a **13A ( BS1363 )** fused plug is used it must be fitted with a 3A fuse. If in doubt consult a qualified electrician.

**Wiring for a 13 Amp Plug ( BS1363 )**

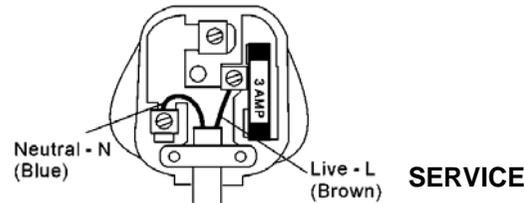

## & WARRANTY


For your convenience, record the complete model number and product name (located on the Product Identification Plate), the date you purchased the product, and attach your purchase receipt as proof of purchase. To ensure your product is covered by warranty, the complete faulty product together with your purchase receipt should be returned to your retailer.

### ONE (1) YEAR LIMITED WARRANTY Save This Warranty Information

EHS (International) Ltd. Guarantees this product free from defects in materials and workmanship for a period of one (1) year.

Should this unit be operated under conditions other than those recommended, at voltages other than the voltage indicated on the unit, or any attempts made to service or modify the unit, will render this **WARRANTY VOID**. The product you buy may sometimes differ slightly from illustration. This warranty is in addition to, and does not affect, your statutory rights

Should you have a problem with this product, please call our Help Desk on: (0870) 742 5021

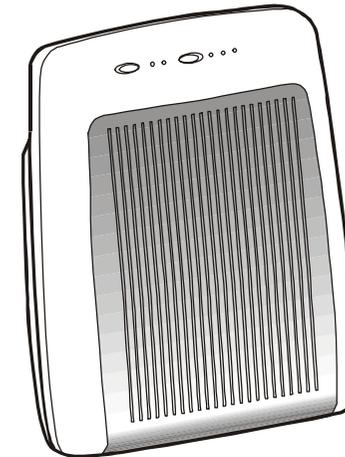


## Air Purifier AP281


**Please read this instruction manual before operating and keep safe for future reference.**

## FILTER INSTALLATION & MAINTENANCE

Fit the HEPA Filter into your Air Purifier. Unplug your Purifier from the wall socket. Open the front cover, levering it from the bottom. The corrugated surface faces the front of the purifier. Refit the front cover, starting at the top. Replacement filters are available from our Help Desk on 0870 742 5021.

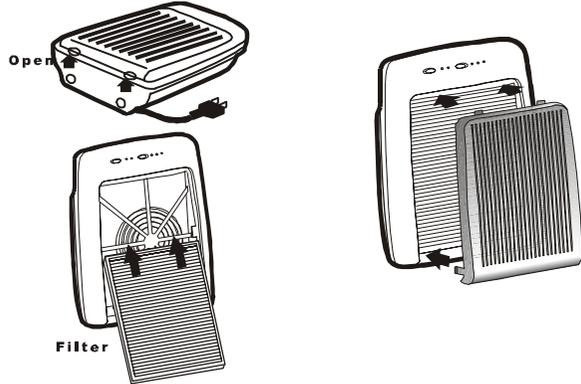

## PARTS IDENTIFICATION

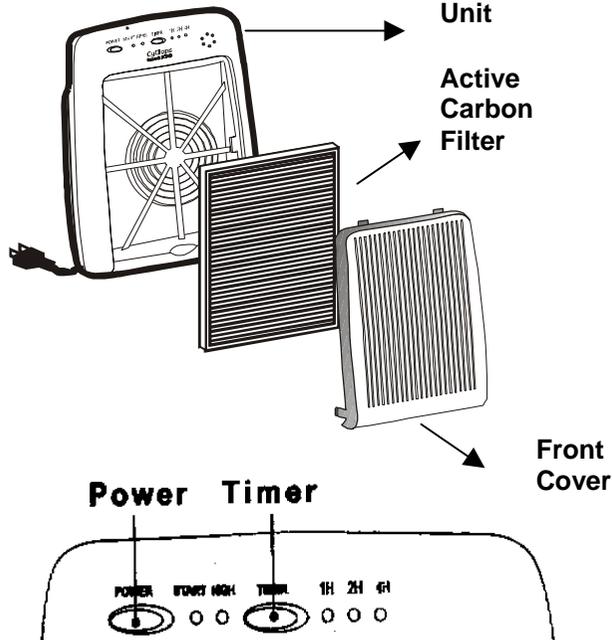

## OPERATION

1. Ensure filter is unpacked and installed before operation. (Refer to Filter Installation Section).

### BEST PERFORMANCE:

We recommend that you operate your air cleaner 24 hours a day because indoor air can be quickly contaminated by activity in a room, for example outside air, smoking, and other air pollutants. While the air cleaner will not process all the air in a room, the more air circulated through your air purifier, the more filtered air is returned to the room. Portable air cleaners will be much more effective in rooms where all doors and windows are closed. However, for best performance the air outlet slot should be kept clear, at least 1 metre (three feet) in all directions.

1. Insert the main's plug into a suitable power socket, checking first that the household voltage matches the voltage stated on the product rating plate.
2. Press the POWER button to turn your air cleaner ON. The fan will start at LOW speed. Press the POWER button again to select HIGH speed. To turn the air purifier OFF press the POWER button again. The Ioniser will operate with the fan.

### TIMER OPERATION

The timer can be used to turn your purifier OFF after a set number of hours.

1. Press the TIMER button, your purifier will turn off after 1 hour. Press it again for 2 hours and again for 4 hours. Press it again to cancel the Timer mode.

## MAIN FEATURES

1. A carbon pre filter eliminates odours and harmful gases such as formaldehyde and carbon monoxide.
2. A special silver coating within the filter kills most bacteria on contact, helping to further improve the quality of the air in your home or office.
3. HEPA Filter captures 99.97% of airborne particles as small as 0.3 microns. These tiny particles can become lodged deep in the lungs triggering breathing difficulties.
4. An ioniser that discharges negative ions to combine with and further remove dust, bacteria and mildew. Ionisers are also linked with the feeling of well-being associated with breathing fresh sea air.

## MAINTENANCE

### CAUTION: SWITCH OFF AND DISCONNECT FROM POWER SUPPLY BEFORE SERVICING

1. To clean the unit use a soft cloth to wipe off any dust. If the unit is very dirty use a damp cloth. Do not use any cleaning detergents, sprays or any other chemicals, as these will damage the unit. Ensure no water enters into the machine.
2. Replace the HEPA Filter when you notice that the Charcoal Filter is no longer removing the smells or after 6 to 9 months.
3. Do not use your unit in areas where there is thick dust or smoke, as this will damage the filter.

## SPECIFICATION

Power:	35W
Voltage:	220-240V ~ 50Hz
N.W:	1.7kg
G.W:	2.0kg

This product has been manufactured to comply with EEC Directives 73/23/EEC and 89/336/EEC



EHS, Manchester, M17 1RN

EHS 03/05

