


User's Guide

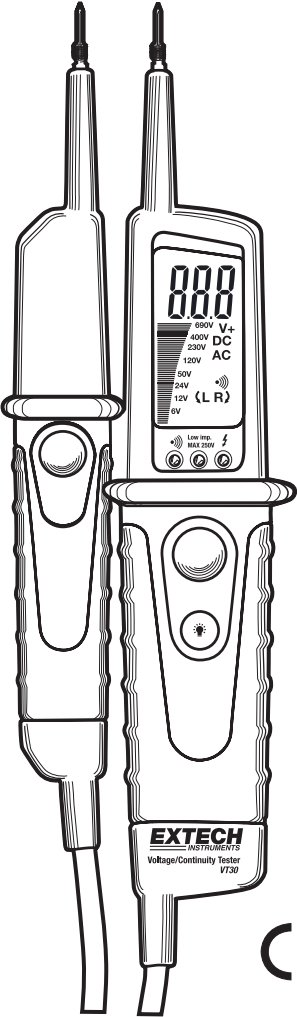

LCD Multifunction Voltage Tester

Model VT30



Introduction

Congratulations on your purchase of the Extech VT30 Multifunction Voltage Tester. The VT30 measures AC voltage to 480V and DC Voltage to 690V with LCD readout, stepped voltage bargraph indicator, and LEDs for positive and negative polarity. Additional features include audible continuity beeper, low impedance test for eliminating phantom voltages, and a built-in flashlight to illuminate test connections during measurements. This meter is shipped fully tested and with proper use will provide years of reliable service.

Safety

International Safety Symbols



This symbol, adjacent to another symbol or terminal, indicates the user must refer to the manual for further information.



This symbol, adjacent to a terminal, indicates that, under normal use, hazardous voltages may be present



Double insulation

Safety Precautions

1. Improper use of this meter can cause damage, shock, injury or death. Read and understand this manual before use.
2. Ensure that any covers or battery doors are properly closed and secured before use.
3. Inspect the condition of the test leads and the meter itself for any damage before use.
4. Do not exceed the rated input limits.
5. Use great care when taking measurements greater than 25VAC rms or 35VDC. These voltages are considered a shock hazard.
6. Discharge capacitors and remove power from the DUT before Continuity tests.
7. Remove the batteries from the meter if the meter is to be stored for long periods.
8. Voltage measurement results on electrical outlets can be misleading because of the difficulty in making a proper connection to the electrical contacts.

Safety Instructions

This meter has been designed for safe use, but must be operated with caution. The rules listed below must be carefully followed for safe operation.


1. **NEVER** apply voltage to the meter that exceeds the specified maximum:

Input Protection Limits	
Function	Maximum Input
VAC, VDC, Continuity	480VAC, 690VDC
Low Impedance	3s<400V AC/690V DC

2. **USE EXTREME CAUTION** when working with high voltages.
3. **ALWAYS** discharge filter capacitors in power supplies and disconnect the power when making continuity tests.
4. **ALWAYS** disconnect the test leads before opening the cover to replace the battery.
5. **NEVER** operate the meter unless the battery cover is in place and fastened securely.

Description

1. Test Probe L1 (-)
2. Test Probe L2 (+)
3. Flashlight
4. LCD display
5. LED (AC voltage indicator [between 100 to 480V])
6. LED (low impedance test)
7. LED (continuity)
8. Low impedance test button (L2)
9. Flashlight button
10. Battery cover
11. Low impedance test button (L1)

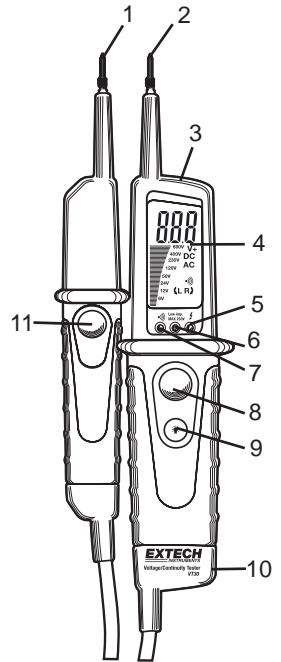

Operation



Always test the meter on a known live circuit before taking measurements

Voltage Measurement


1. Note: The voltage tester will turn on automatically when voltages higher than 4.5V AC/DC are detected.
2. Touch the positive (L2) and negative (L1) test leads to the device or circuit under test.
3. If the voltage is higher than 4.5V AC/DC, the LCD will light and display the reading. The stepped voltage bargraph scale in the display will also indicate the reading.
4. For AC voltages, the ⚡ LED will light and the "AC" icon will appear in the display. For DC voltages, the "DC" icon will be displayed. If the DC voltage is negative, a minus sign will be displayed before the digital readout.



Single Lead AC Voltage Detection

To check for the presence of voltage (between 100V and 480V) using only the positive test lead (L2), touch the lead to the device or circuit under test. If voltage is present, the ⚡ LED will light.

Note: In this mode, the actual voltage is not displayed; only the presence of voltage is detected.

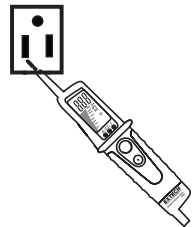


Low Impedance Voltage Measurement

Due to the lowered internal impedance, capacitive voltage is suppressed so that the reading shows the actual voltage applied. This can be used to quickly identify phantom voltages.

1. Hold the two test tips on the measuring points to be tested.
2. Press the two low impedance test buttons simultaneously.
3. The Low Impedance LED will light and the applied voltage will be displayed on the LCD.

Note: The maximum duty cycle in this mode is 5 seconds for voltages up to 250V and 3 seconds for voltages up to 690V. Allow 10 minutes between each reading.

Note: Measuring from hot to ground may trip any GFCI equipped circuits.

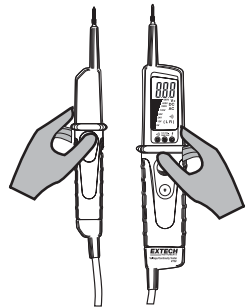


3-Phase Rotation

The 3-phase rotation function indicates whether the 3 phase AC lines or mains are live and also identifies the phase orientation of the three wires before attaching them to a motor or other equipment. The phase sequence will determine the direction (Clockwise or Counterclockwise) a motor will rotate when connected.

To determine clockwise rotation (P1-P2-P3)

1. Touch probe L1 to any one of the three AC mains. Label this phase P1.
2. Touch probe L2 to the other two phases. One phase will indicate "L" and one will indicate "R"
3. Label the phase that indicates "R" as P2.
4. Touch probe L1 to phase P2 and touch probe L2 to the remaining unlabeled AC main wire. The "R" icon will illuminate. Label this phase P3.
5. The clockwise sequence P1-P2-P3 (also known as 1-2-3 or R-S-T) has been identified.
6. To determine a counterclockwise rotation exchange the "L" and "R" in the procedure.

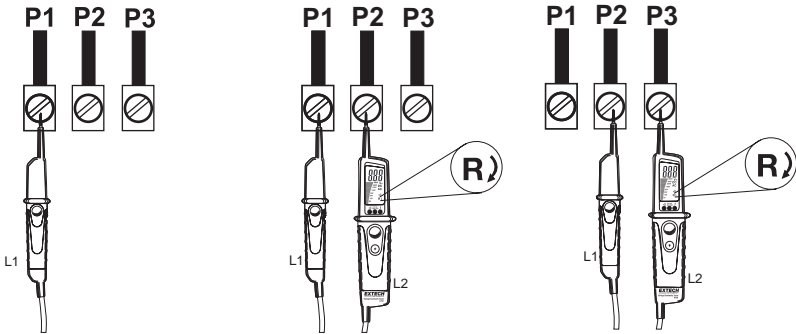


Continuity Test

The tester can measure resistance and alert the user if the resistance value is less than 200k Ω .


1. Before taking a continuity test, make sure that power to the device or circuit under test is off and that all capacitors are discharged.
2. Touch the test tips to the device under test.
3. If the resistance is less than 200k Ω , the tester will sound an audible alert; the LCD will display "000", and the continuity LED will light.


Flashlight

Press and hold the  button to turn the flashlight on. Release the button to turn the flashlight off. After the button is released, the light will turn off after 12 seconds (approx).

Maintenance

Battery replacement

1. The  icon will appear in the lower right of the display when the battery voltage becomes low. Replace the batteries when this appears.
2. Disconnect the meter from any test device or circuit before opening the tester.
3. Loosen the recessed Phillips head screw at the bottom of the tester. Do not remove the screw.
4. Hold the meter and pull the lower portion of the meter off until the batteries are exposed.
5. Replace the two 'AAA' batteries observing polarity and dispose of the old batteries properly.
6. Slide the meter back together and replace the screw.

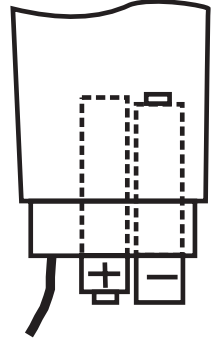

You, as the end user, are legally bound (**EU Battery ordinance**) to return all used batteries, **disposal in the household garbage is prohibited!** You can hand over your used batteries / accumulators at collection points in your community or wherever batteries / accumulators are sold!

Disposal: Follow the valid legal stipulations in respect of the disposal of the device at the end of its lifecycle

Cleaning and Storage

Before cleaning the tester, ensure that the test leads are not connected to any circuit or device. Wipe the meter only with a damp cloth as needed. Do not apply abrasives, solvents, or other cleaners to the surface of the meter. Store with the battery removed and avoid extreme temperature and humidity.

Specifications

LCD display	1999 counts (3-1/2 digits) with bargraph and backlight
Resolution	1 Volt
AC Voltage range	0 to 480V
ACV frequency range	50/60Hz
DC Voltage range	0 to 690V
Accuracy	ACV $\pm(1.5\%rdg + 5d)$; DCV $\pm(1.0\%rdg + 3d)$
Range selection	Automatic
Max measuring current	$\leq 1.0mA$ (400VAC); $\leq 1.5mA$ (690VDC)
Response time	Updates 2-3 times/sec
Input Impedance	1M Ω (approx)
Continuity test	Range 0 to 200k Ω , guaranteed on < 50k Ω ; <5 μA test current
Overvoltage protection	480VAC/690VDC
Low impedance test	12-250VAC/DC; impedance <6k Ω ;
LCD enable input voltage	>4.5V AC/DC
Operation time:	5s<250V AC/DC
Power supply	2 x "AAA" 1.5V alkaline batteries
Battery life	Approx. 8 hours continuous use typical
Operating Temperature	14 to 131 $^{\circ}F$ (-10 to 55 $^{\circ}C$)
Storage Temperature	-22 to 140 $^{\circ}F$ (-30 to 60 $^{\circ}C$)
Operating Humidity	10 to 85% RH (non-condensing)
Safety	This meter is intended for origin of installation use and protected, against the users, by double insulation per EN61243-3 and IEC61243-3 to Category IV 600V and Category III 1000V; Pollution Degree 2.
Approvals	CE, IP64
Dimensions	9.4 x 3 x 1.6"(240 x 78 x 40mm)
Weight	9.2oz (260G)

Warranty (English)

EXTECH INSTRUMENTS CORPORATION (A FLIR COMPANY) warrants this instrument to be free of defects in parts and workmanship for **one year** from date of shipment (a six month limited warranty applies to sensors and cables). If it should become necessary to return the instrument for service during or beyond the warranty period, contact the Customer Service Department at (781) 890-7440 ext. 210 for authorization or visit our website www.extech.com for contact information. A Return Authorization (RA) number must be issued before any product is returned to Extech. The sender is responsible for shipping charges, freight, insurance and proper packaging to prevent damage in transit. This warranty does not apply to defects resulting from action of the user such as misuse, improper wiring, operation outside of specification, improper maintenance or repair, or unauthorized modification. Extech specifically disclaims any implied warranties or merchantability or fitness for a specific purpose and will not be liable for any direct, indirect, incidental or consequential damages. Extech's total liability is limited to repair or replacement of the product. The warranty set forth above is inclusive and no other warranty, whether written or oral, is expressed or implied.

Product Support

Technical Support: support@extech.com -- Calibration and Repairs: repair@extech.com

Product specifications subject to change without notice

For the latest version of User Guides, Software updates, and other information:

www.extech.com (781) 890-7440

Extech Instruments Corporation, 285 Bear Hill Road, Waltham, MA 02451

ISO9001 Certified

Copyright © 2010 Extech Instruments Corporation (a FLIR company)

All rights reserved including the right of reproduction in whole or in part in any form.

Garantía (Español)

EXTECH INSTRUMENTS CORPORATION (UNA EMPRESA FLIR) garantiza este instrumento para estar libre de defectos en partes o mano de obra durante un año a partir de la fecha de embarque (se aplica una garantía limitada a seis meses para los cables y sensores). Si fuera necesario regresar el instrumento para servicio durante o después del periodo de garantía, llame al Departamento de Servicio a Clientes al teléfono (781) 890-7440 ext. 210 para autorización, o visite nuestra página en Internet www.extech.com para Información del contacto. Se debe otorgar un número de Autorización de Retorno (RA) antes de regresar cualquier producto a Extech. El remitente es responsable de los gastos de embarque, flete, seguro y empaque apropiado para prevenir daños en tránsito. Esta garantía no se aplica a defectos resultantes de las acciones del usuario como el mal uso, alambrado equivocado, operación fuera de las especificaciones, mantenimiento o reparación inadecuada o modificación no autorizada. Extech específicamente rechaza cualesquier garantías implícitas o factibilidad de comercialización o aptitud para cualquier propósito determinado y no será responsable por cualesquier daños directos, indirectos, incidentales o consecuentes. La responsabilidad total de Extech está limitada a la reparación o reemplazo del producto. La garantía precedente es inclusiva y no hay otra garantía ya sea escrita u oral, expresa o implícita.

Ayuda de producto

Soporte Técnico support@extech.com - Reparación / Retornos: repair@extech.com

Las especificaciones del producto están sujetas a cambios sin aviso

Para la última versión de esta Guía del usuario, actualizaciones de software y otra información

www.extech.com (781) 890-7440

Extech Instruments Corporation, 285 Bear Hill Road, Waltham, MA 02451

Certificado ISO9001

Copyright © 2010 Extech Instruments Corporation (una empresa FLIR)

Reservados todos los derechos, incluyendo el derecho de reproducción total o parcial en cualquier medio.

Garantie (Français)

EXTECH APPAREILS CORPORATION (Une société FLIR) garantit que cet appareil est exempt de défauts matériels et de fabrication pendant un an à compter de la date d'envoi (une garantie limitée de six mois s'applique aux capteurs et câbles). Si le renvoi de l'appareil pour réparation devient nécessaire durant ou après la période de garantie, contactez le service client au (781) 890-7440 poste. 210 pour autorisation ou visitez notre site Web à l'adresse www.extech.com pour obtenir nos coordonnées. Un numéro d'autorisation de retour (AR) doit être délivré avant tout retour de produit à Extech. L'expéditeur prend à sa charge les frais d'expédition, le fret, l'assurance et l'emballage correct de l'appareil afin de prévenir toute détérioration durant le transport. Cette garantie ne s'applique pas aux dommages imputables à l'utilisateur tel que l'usage impropre ou abusif, un mauvais câblage, une utilisation non conforme aux spécifications, un entretien ou une réparation incorrecte, ou toute modification non autorisée. Extech déclinera spécifiquement toute garantie ou qualité marchande ou aptitude à l'emploi prévu et ne sera en aucun cas tenu responsable pour tout dommage conséquent direct, indirect, ou accidentel. La responsabilité totale d'Extech est limitée à la réparation ou au remplacement du produit. La garantie définie ci-dessus est inclusive et aucune autre garantie, écrite ou orale, n'est exprimée ou implicite.

Service d'assistance technique support@extech.com - Réparations et retours : repair@extech.com

Pour obtenir la dernière version de ce manuel d'utilisation, des mises à jour logicielles et autres informations

www.extech.com

Extech Appareils Corporation, 285 Bear Hill Road, Waltham, MA 02451

Certifié ISO 9001

©

airconcern

more info for Extech VT30

Phone: 01235 838 555

Email: cs@airconcern.co.uk

Web: www.airconcern.co.uk

Air Concern Ltd, Building 173 Curie Avenue Harvell Didcot, Oxfordshire