


BOX FAN INSTRUCTIONS

If you do not have access to a furnace or desire to sample a particular room, a box fan can be used rather than a furnace.

Place box fan near the middle of the room

1. Set the box fan to the highest setting taking care not to touch the center filter media, remove the Jossam Sampler from the protective sleeve (*save the protective sleeve for return mailing*). **The supplied pins are not needed for the box fan method.** With the writing on the Jossam Sampler facing out, place the Jossam Sampler half way up from the bottom and two inches in from the outer edge of the inlet side of the box fan. (*See diagram*).
2. Fan suction should hold the sampler in place. However, the sampler should be taped in place to prevent movement. (*See diagram*).
3. Run fan continually for a **minimum of 24 hours** up to a **maximum of 72 hours**.
4. **Record start time** on the supplied order form and check the "Box Fan" Method.
5. After sampling period is completed, remove the filter from box fan and shut off the box fan.
6. Taking care not to touch the center filter media, place the Jossam Sampler in the protective sleeve for return mailing.
7. **Record finish time** on the order form.
8. Complete the order form and select the test(s) you would like to have performed by marking the appropriate boxes.
9. Place Jossam Sampler, order form, and payment (check, money order, or credit card) in the enclosed envelope and mail to Techtron Engineering.

Laboratory results will be mailed to you within seven days of receipt of samples-14 days for bacteria analysis.

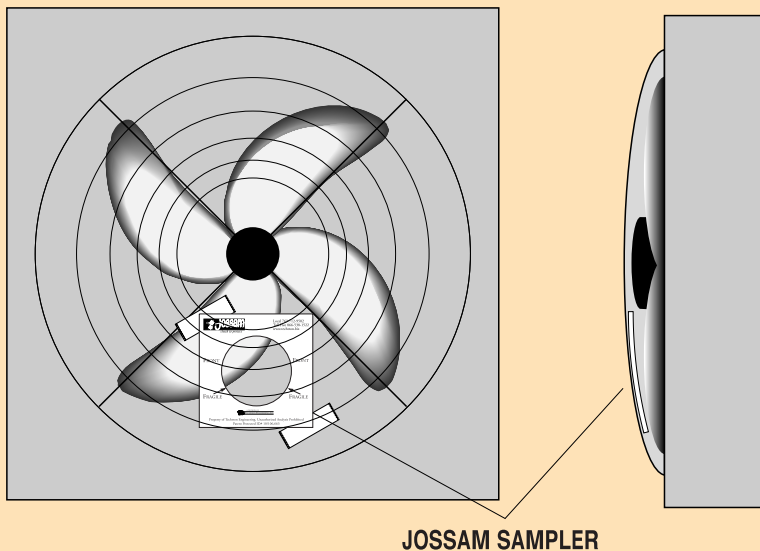

Ordering Information: 1-866-552-7873 or www.jossam.biz
Technical Assistance: 763-712-9502 or www.techtron.biz