

## VACUUM CLEANER METHOD

This method should be used if you wish to sample a particular room or wish to sample the exhaust air from your vacuum cleaner. Please be aware that vacuum cleaners are notorious for spewing microscopic contaminants into the air. Using a clean vacuum bag or emptying your reservoir container prior to using the Jossam Sampler will help ensure the accuracy of this test.


**Place vacuum cleaner near the center of the room.**

1. Hook up the attachment hose to the vacuum cleaner without any attachment ends. Set end of hose between one to four feet above the floor by resting the hose on a piece of furniture.
2. Turn on vacuum cleaner.
3. Taking care not to touch the center filter media, remove the Jossam sampler from the protective sleeve (**save the protective sleeve for return mailing**). **The supplied pins are not needed for the vacuum method.** With the writing on the Jossam Sampler facing out, place the Jossam Sampler in the center of the attachment hose end. The suction will keep the filter in place. (*See diagram*).

**Caution: A new vacuum bag and/or empty dust reservoir is recommended, and the pressure relief hole located on the Jossam filter media should be placed directly over the hose opening. Failure to follow these instructions may lead to overheating of the vacuum cleaner.**

4. Run vacuum cleaner for a **minimum of 6 minutes** up to a **maximum of 9 minutes**.
5. **Record start time** on the supplied order form and check "Vacuum Cleaner" method.
6. After running the vacuum cleaner for the specified time, hold the corner of the Jossam sampler while taking care not to touch the center filter media. Turn vacuum cleaner off - the filter media will release easily. Place the Jossam Sampler in the protective sleeve for mailing.
7. **Record finish time** on the order form.
8. Complete the order form and select the test(s) you would like to have performed by marking the appropriate boxes.
9. Place Jossam Sampler, order form, and payment (credit card information) in the enclosed envelope and mail to Techtron Engineering.

**Laboratory results will be mailed to you within seven days of receipt of samples-14 days for bacteria analysis.**

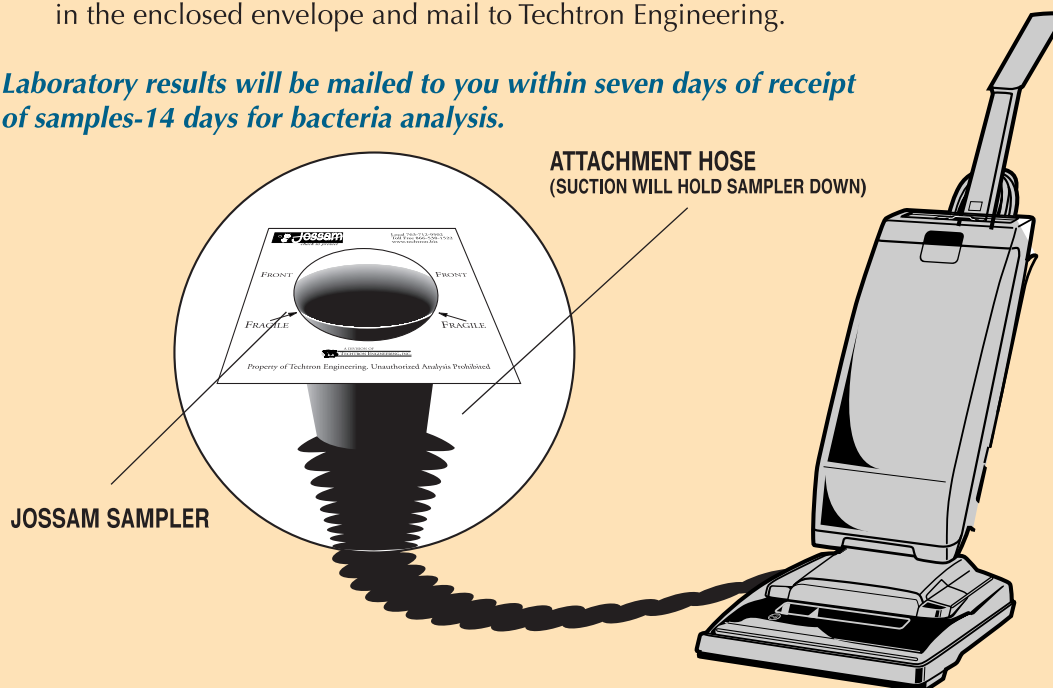

**Ordering Information: 1-866-552-7873 or [www.jossam.biz](http://www.jossam.biz)  
Technical Assistance: 763-712-9502 or [www.techtron.biz](http://www.techtron.biz)**