


User's Guide

**EXTECH**<sup>®</sup>  
INSTRUMENTS

A FLIR COMPANY

# Non-Contact Phase Rotation Tester

Model

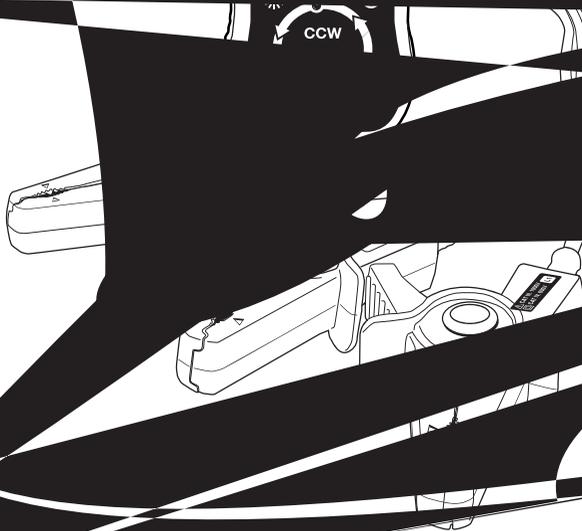

## Introduction

---

Congratulations on your purchase of this Extech Meter. The PRT200 is used to quickly and accurately determine three phase sequence for motor installation and repair. The non-contact voltage detecting technique permits easy connection to insulated conductors, avoiding uncertain and difficult connections to bare high voltage wires. This meter is shipped fully tested and calibrated and, with proper use, will provide years of reliable service.

## Safety

---

### International Safety Symbols



This symbol, adjacent to another symbol or terminal, indicates the user must refer to the manual for further information.



This symbol, adjacent to a terminal, indicates that, under normal use, hazardous voltages may be present.



Double insulation

### Safety Notes

1. Read the following safety information carefully before attempting to operate the tester.
2. Use the tester only as specified in this manual or the protection provided by the tester may be impaired.
3. This instrument cannot identify a missing earth line.
4. To assure accurate results, do not touch the clips during measurements.
5. Do not pull the cable when removing the measurement clips from the measured conductors. It may damage the test lead.
6. Do not expose the instrument to direct sunlight, high temperature, high humidity or dew.
7. Keep the tester dry! Do not use the instrument when it is wet.
8. Do not mix old batteries with new ones.
9. Never open the battery compartment cover while connected to live conductors.
10. Avoid large shocks or vibrations, they may damage the tester.

## ***Meter Description***

---

1. Clockwise phase sequence LEDs
2. Rotation LEDs
3. Live indication LEDs
4. Power on and low voltage LEDs
5. Power switch
6. Brightness selector
7. Counter-Offset
8. Rotation selector
9. Buzzer

1. Magnet
2. Battery compartment cover
3. Battery compartment screw

# Operation

Note: Before proceeding, read all safety notes.

1. Press the power switch to turn on the instrument. All of the LEDs will flash for a 2 second test. Only the power LED will remain on after the test. Do not use the instrument if any of the LEDs do not work.
2. Connect the three non-contact alligator clips to the three phase power conductors.  
Red to L1 (R, U)  
White to L2 (S, V)  
Blue to L3 (T, W)
3. The "▼" symbol on each clip should be placed at the center of each conductor.
4. The CW or CCW LED and rotation LEDs will indicate the phase sequence.
5. The buzzer will sound intermittently for a clockwise sequence and continuously for a counter-clockwise sequence..

## Status Indications

State	Indication
Three live conductors	L1,L2,L3 LEDs are ON
Open phases	L1, L2 or L3 LED is OFF for open
Missing Earth line	LED does not light up for missing
Earth line (Delta connection)	Phase with flashing LED is an ea
Positive CW phasing	The CW Rotation LEDs flash in c with "arrow" marks. The buzzer so
Negative CCW phasing	The CCW Rotation LEDs flash in co indicated with "arrow" marks. The buz

## Brightness

Press the Brightness button to increase the light intensity of the LEDs. When observing the LEDs in brightly illuminated areas.

## Auto Power Off

In order to extend battery life, the unit will automatic

## Magnet Mounting

Four magnets are located on the rear pa

## Maintenance

---

When the ON LED begins to flash, the batteries need to be replaced.

1. Remove the clips from any conductors.
2. Remove the screw holding the battery compartment cover and remove the cover.
3. Replace the four AA batteries.
4. Replace the battery cover.



You, as the end user, are legally bound ( ) to return all used batteries and accumulators;

You can hand over your used batteries / accumulators at collection points in your community or wherever batteries / accumulators are sold!

Follow the valid legal stipulations in respect of the disposal of the device at the end of its lifecycle.

Periodically wipe the case with a damp cloth. Do not use abrasives or solvents.

A small standby current flows when the meter is off. If the meter is not to be used for a period longer than 60 days, remove the batteries and store them separately.

## Specifications

---

Measurement Principle	Static induction
Input Voltage	75 to 1000VAC
Frequency Range	45 to 65Hz
Max conductor diameter	33mm (1.3")
Probe length	86cm (34")
Auto-Off	5 min. without sequence detection
Low Battery Warning	Power LED flashes
Batteries	4 x 1.5V AA
Current consumption	15mA
Operating Temperature & Humidity	-10°C to 50°C (14°F to 122°F) Max. 80% R.H.
Storage temperature & Humidity	-20°C to 60° (-4°F to 140°F) Max. 80% R.H.
Safety	This meter is intended for origin of installation use and protected, against the users, by double insulation per EN61010-1 to Category IV 600V and Category III 1000V; Pollution Degree 2.
Approvals	CE

©  
All rights reserved including the right of reproduction in whole or in part in any form.  
[www.extech.com](http://www.extech.com)

**airconcern**

more info for Extech PRT200

Phone: 01235 838 555

Email: [cs@airconcern.co.uk](mailto:cs@airconcern.co.uk)

Web: [www.airconcern.co.uk](http://www.airconcern.co.uk)

Air Concern Ltd, Building 173 Curie Avenue Harvell Didcot, Oxfordshire